


POWER SUPPLY INSTALLATION GUIDE



For bathrooms and undertile living areas
(brickwork)

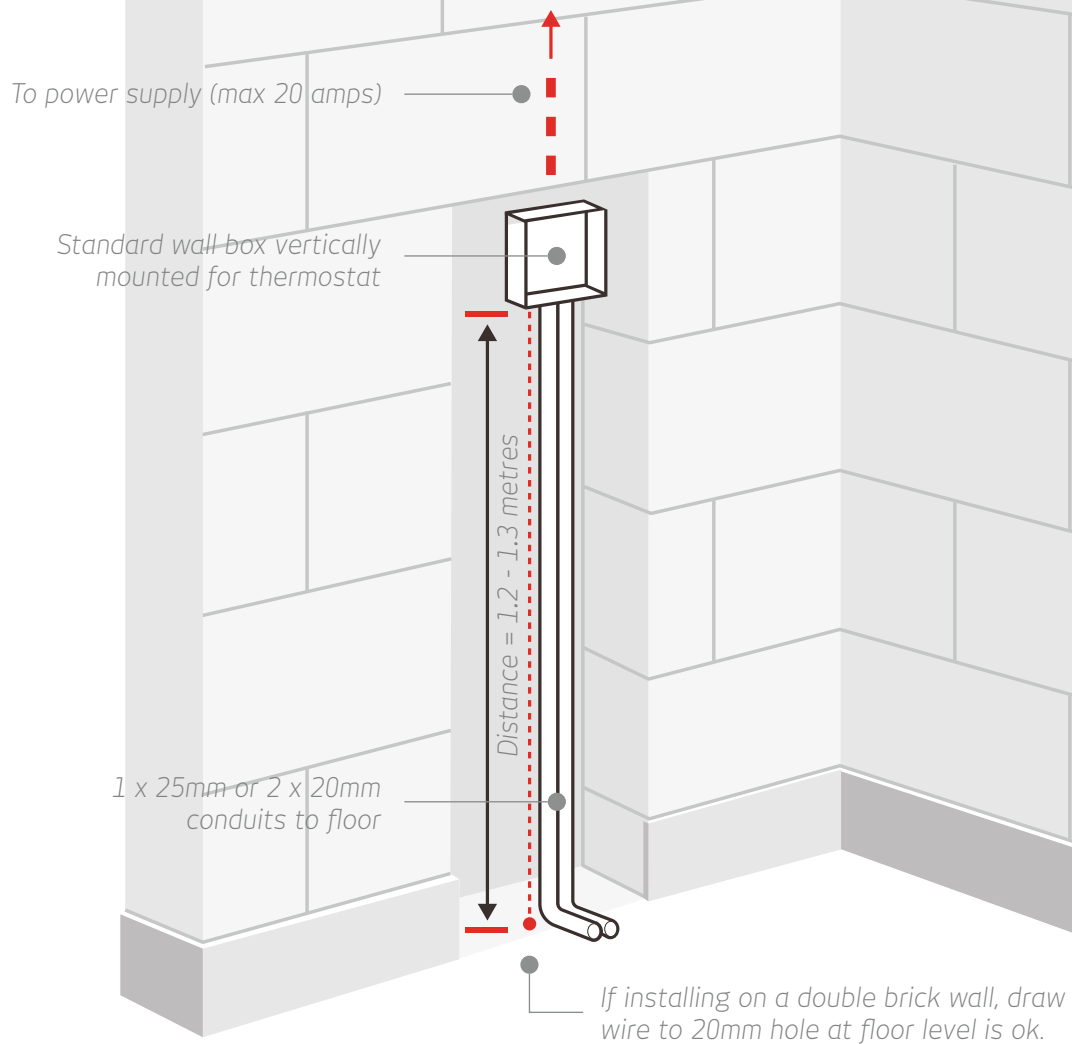

NOTE:

Power must have RCD protection. For bathrooms the load will be no more than 0.8 amps per sqm 'free floor area'.

For example:

9 sqm bathroom - bath, shower vanity = 5sqm x 0.8 = 4 amps.

For larger areas the load will typically be 0.6 amps per sqm.